



T803 cable fitting , installation instructions

Type 1: without hydraulic crimper

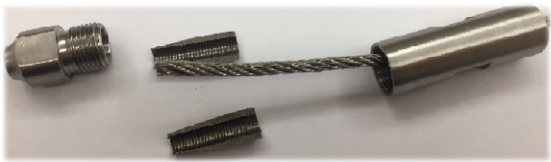

Type 2: with hydraulic crimper



Mount to steel or
concrete



Wood screws ,
for wood mount

Hydraulic crimper

